




**AGILE
OFFROAD**
SMARTER THAN DIRT

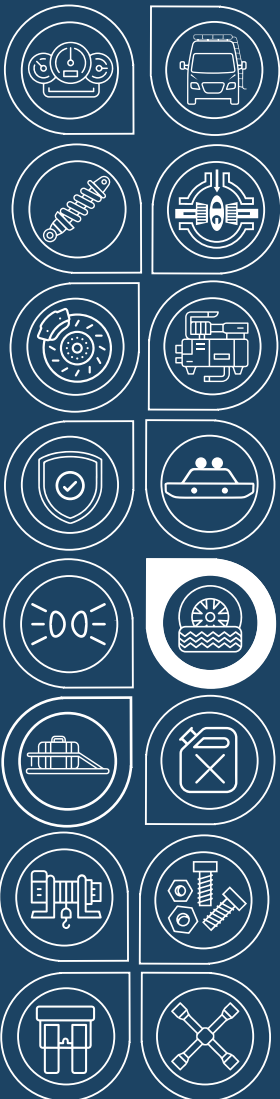

INSTALLATION GUIDE

TPMS Sensor Bracket for INEOS Grenadier

AO-W3G-X

INSTALLATION GUIDE

INEOS GRENADIER TPMS SENSORS ON AFTERMARKET WHEELS FOR **PRECISE TIRE MONITORING**

TPMS Sensor Bracket for INEOS Grenadier



The AO TPMS Z-Bracket and Apex RPV Valve Stem Kit allow for the use and installation of the factory Ineos Grenadier TPMS sensors on aftermarket wheels.

SKU

AO-W3G-X

PARTS INCLUDED

1 x AO Z-Bracket

1 x 3/4" OD Spacer

1 x Apex RPV Valve Stem
(AO-W3G-2: Standard Length RPV Stem)
(AO-W3G-3: XL Length RPV Stem)

TOOL NEEDED

Tire Machine

11mm Socket/Wrench

14mm Socket/Wrench

Blue Loctite

INSTALLATION TIME

With Tire Mounting and Balancing:
2-3 Hours



INSTRUCTIONS

Label each factory wheel/tire LF (left rear), RF (right rear), LR (left rear), and RR (right rear) before removing from vehicle. Remove the factory Ineos Grenadier TPMS sensors from the factory wheels using manufacturer's recommended procedures. Each factory sensor is programmed from the Ineos factory and are position specific. Install new wheel/tire with factory sensor to the sensor's factory position.

INSTALLATION GUIDE



1. Install the Apex RPV Valve Stem on to wheel as shown with the supplied rubber seal on the inside of wheel.




2. Use a 14mm socket/wrench to install supplied valve stem nut. Torque nut to 12 inch-lbs.



3. Assemble the factory Ineos Grenadier TPMS sensor and stem with the AO Z-Bracket using the supplied $\frac{3}{4}$ " spacer and factory valve stem nut. Apply a small drop of blue Loctite to the threads.



4. Install the TPMS sensor and AO Z-Bracket assembly onto the Apex Valve Stem using the supplied nut. Position the sensor against the wheel surface. Apply a small drop of Blue Loctite on threads. Torque nut to 25-45 inch-lbs.

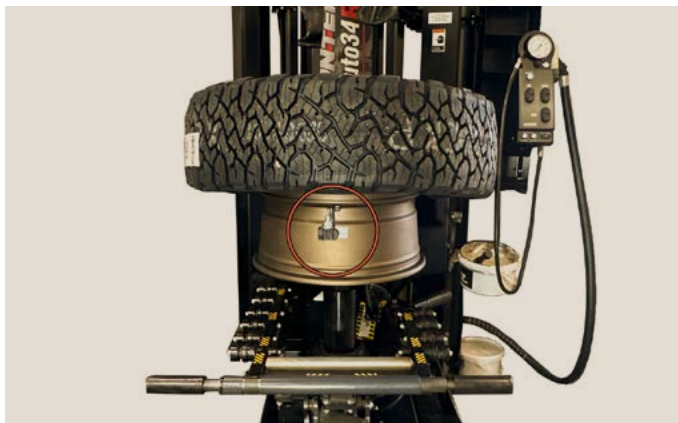

5. To avoid damaging TPMS Sensor, make sure the wheel is positioned correctly on tire machine turntable using the manufacturer's recommended specs and that proper tire mounting techniques are used.

INEOS
GRENADIER



AGILE
OFFROAD



Interior



Exterior



Suspension



Air Locker &
Drivetrain



Steering &
Brakes



Air
Compressors



Armor &
Protection



Bumpers



Lighting



Wheels &
Tires



Storage &
Racks



Water &
Fuel Tanks



Winches &
Recovery



Replacement
Parts &
Accessories



Electrical



Tools



agileoffroad.com



info@agileoffroad.com



619-328-1297